

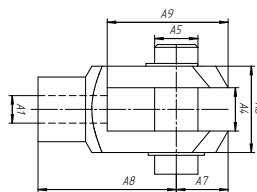



Вилка YC

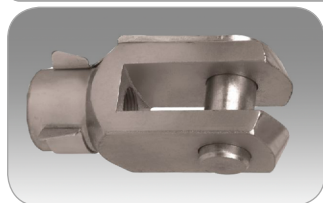



Сферический наконечник P

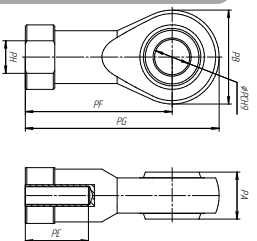



Шаровый шарнир VKA

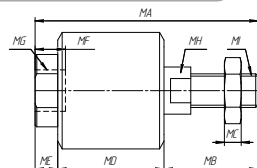



Передний и задний фланец F

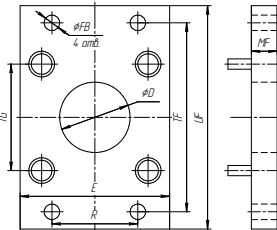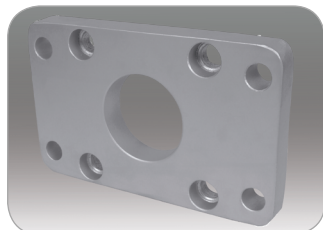


Задняя подвеска CA

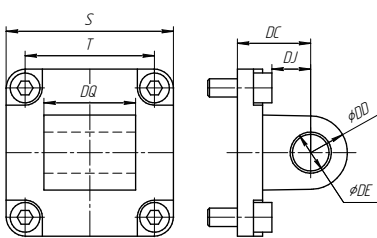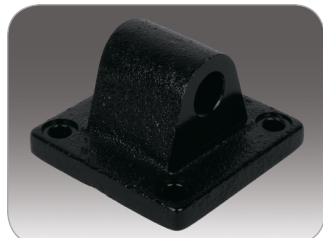



Задняя цапфа CB

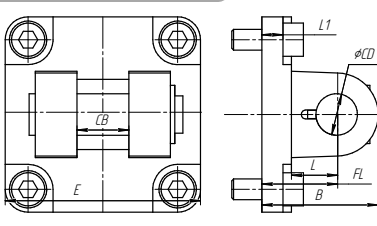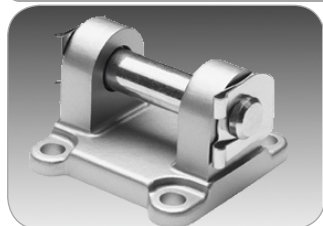

Шарнирное крепление под углом 90° УВ

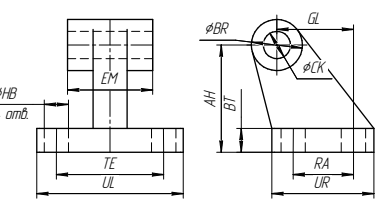

Лапы LP

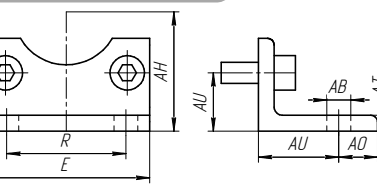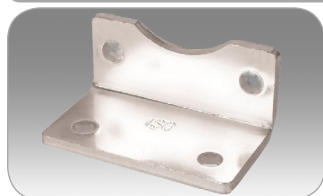

Ø поршня	A1	A4	A5	A6	A7	A8	A9
32	M10x1.25	10	10	20	12	40	32
40	M12x1.25	12	12	24	14	48	38
50	M16x1.5	16	16	32	19	64	51
63	M16x1.5	16	16	32	19	64	51
80	M20x1.5	20	20	40	25	80	65
100	M20x1.5	20	20	40	25	80	65
125	M27x2	25	25	50	38	110	92

Ø поршня	PA	PB	PC	PD	PE	PF	PG	PH
32	14	28	10	26	20	43	57	M10x1.25
40	16	32	12	30	22	50	66	M12x1.25
50	21	42	16	39	28	64	85	M16x1.5
63	21	42	16	39	28	64	85	M16x1.5
80	25	50	20	46	33	77	102	M20x1.5
100	25	50	20	46	33	77	102	M20x1.5
125	37	70	28	64	51	110	145	M27x2

Ø поршня	MA	MB	MC	MD	ME	MF	MG	MH	MI
32	73	20	6	45	8	14	M10x1.25	12	M10x1.25
40	77	24	7	46	7	14	M12x1.25	12	M12x1.25
50	106	32	8	62	12	20	M16x1.5	19	M16x1.5
63	106	32	8	62	12	20	M16x1.5	19	M16x1.5
80	122	40	10	68	14	32	M20x1.5	19	M20x1.5
100	122	40	10	68	14	32	M20x1.5	19	M20x1.5
125	147	54	13.5	77	16	38	M27x2	24	M27x2

Ø поршня	D	E	FB	L4	MF	R	TF	TG	UF
32	30	45	7	5	10	32	64	32,5	80
40	35	54	9	5	10	36	72	38	90
50	40	65	9	6,5	12	45	90	46,5	110
63	45	76	9	6,5	12	50	100	56,5	120
80	45	94	12	9	16	63	126	72	150
100	55	112	14	9	16	75	150	89	175
125	60	135	16	10,5	20	90	180	110	210

Ø поршня	S	T	DC	DD	DE	DJ	DQ
32	47	32,5	22	9	10	13	25,8
40	53	38	25	12	12	16	27,8
50	65	46,5	27	12	12	17	31,7
63	75	56,5	32	15	16	22	39,7
80	95	72	36	15	16	22	49,7
100	115	89	41	20	20	27	59,7
125	140	110	50	25	25	33	69,7
160	180	140	55	30	30	33,5	89,7
200	220	175	60	30	30	37	89,7

Ø поршня	CB	CD	E	FL	L	L1
32	26	10	45	22	13	9
40	28	12	52	25	16	9
50	32	12	60	27	16	11
63	40	16	70	32	21	11
80	50	16	90	36	22	14
100	60	20	110	41	27	14
125	70	25	130	50	35	15

Ø поршня	AH	BR	BT	CK	EM	GL	HB	RA	TE	UL	UR
32	32	10	8	10	26	21	6,5	18	38	51	31
40	36	11	10	12	28	24	6,5	22	41	54	35
50	45	13	12	12	32	33	9	30	50	65	45
63	50	15	12	16	40	37	9	35	52	67	50
80	63	15	14	16	50	47	11	40	66	86	60
100	71	19	15	20	60	55	11	50	76	96	70
125	90	22,5	20	25	70	70	14	60	94	124	90

Ø поршня	AB	AH	AO	AT	AU	E	R
32	7	32	6	5	24	45,5	32
40	10	36	9	5	28	54,5	36
50	10	45	9	6	32	65	45
63	10	50	12	6	32	76	50
80	12	63	15	6	41	94	63
100	14	71	17	6	41	112	75
125	16	90	22	8	45	131	90